

**PAPRSUSP1 Suspender Kit includes 2 ea. two-piece shoulder straps with slide buckle.**

## Attaching suspenders to the PAPR Belt:

1. Thread the PAPR belt buckle through the loop on the longer suspender strap and slide the loop over the belt on one side of the blower. Continue to slide the suspender loop onto the belt until it is resting near the blower housing. Make sure the double slide adjustment on the suspender strap is facing outward. See figure 1.



**Figure 1**

Repeat on other side of the belt using the second suspender strap.

2. Cross one of the installed suspender straps over to the opposite side of the belt and thread the PAPR belt buckle through the loop on the shorter suspender strap. Make sure the double buckle slide adjustment on the suspender strap is facing outward. Repeat for other suspender strap. When complete, the suspender straps should cross over the shoulder on the back of the worker. See figure 2.



**Figure 2**

The Bullard PAPRSUSP1 suspenders are designed for use with any Bullard PAPR system. The suspenders are designed to provide additional support for the weight of the blower and battery by crossing over the shoulders and attaching to the belt on either side of the blower.

3. Complete donning of the PAPR belt and blower by fastening the PAPR belt buckle.
4. With the suspender straps in place, adjust the PAPRSUSP1 suspender by pulling on either of the short straps that are threaded through the double slide adjustment. Pull the double straps to position the buckle on the front of the worker to the desired location and to tighten the suspender strap for comfort. Repeat this for both sides. See figure 3.



**Figure 3**

5. Once size and comfort adjustments are complete, the user may cut off any unneeded suspender strap material.

### **NOTE**

The PAPR blower should remain seated on the waist of the worker with the suspender straps tight enough to remain comfortable.

**Americas:**  
E.D. Bullard Company  
1898 Safety Way  
Cynthiana, KY 41031-9303  
Toll free: 877-BULLARD (285-5273)  
Tel: 859-234-6616  
Fax: 859-234-8987  
[www.bullard.com](http://www.bullard.com)

**Europe:**  
Bullard GmbH  
Lilienthalstrasse 12  
53424 Remagen • Germany  
Tel: +49-2642 999980  
Fax: +49-2642 9999829  
[www.bullardextrem.com](http://www.bullardextrem.com)

**Asia-Pacific:**  
Bullard Asia Pacific Pte. Ltd.  
LHK Building  
701, Sims Drive, #04-03  
Singapore 387383  
Tel: +65-6745-0556  
Fax: +65-6745-5  
[www.bullard.com](http://www.bullard.com)

©2009 Bullard. All rights reserved.

