

## 4" Leather Front Mount Kit – Part Number R400

For FX, PX, LT and USRX Model Helmets

### Installation Instructions

#### Contents

This Bullard Leather Front Mount Kit contains:

- 1 Leather Front Mounting Bracket
- 2 Sheet Metal Screws
- 2 Machine Screws
- 2 Hex Nuts

#### Installation

Step 1: Locate the drill guide marks on the underside of the helmet brim (**Figure 1**).

Step 2: Drill two holes through the drill guide marks with a 3/16" drill bit.

Step 3: Attach the 4" leather front to the mount using the two machine screws to the hex nuts on the back side of the mount with a Phillips head screw driver. Use the middle two slots for standard 4" fronts and use the top and bottom four slots for LA style fronts. Do not over tighten to prevent stripping of screw threads.

Step 4: Attach the complete 4" front and mount to the brim of the helmet with the two sheet metal screws from the underside of the brim. Hand tighten screws with a Phillips head screw driver to a snug fit. Do not over tighten to eliminate possible damage to the helmet shell.

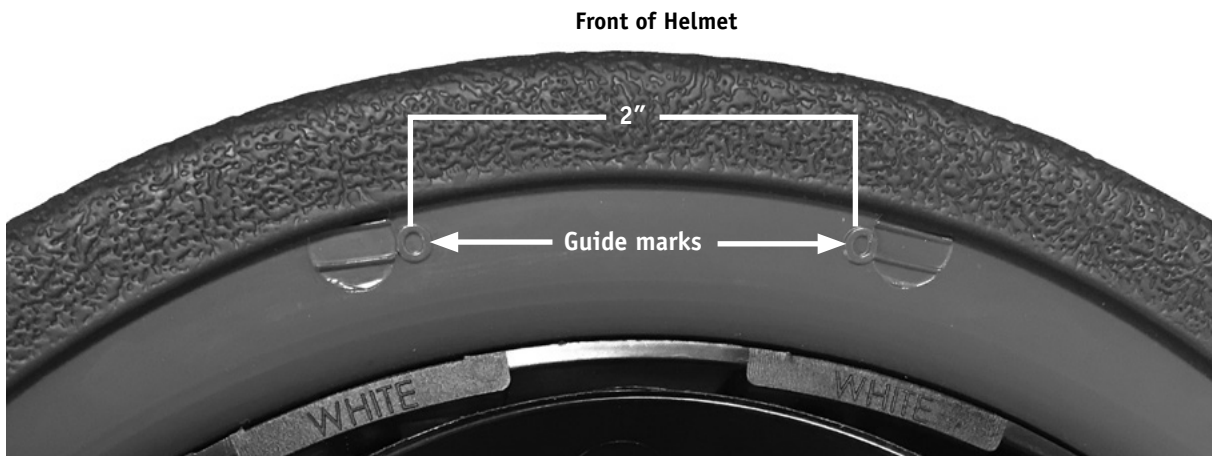


Figure 1

#### Americas: Bullard

1898 Safety Way  
Cynthiana, KY 41031-9303 • USA  
Toll-free within USA: 877-BULLARD (285-5273)  
Tel: +1-859-234-6616  
Fax: +1-859-234-8987

#### Europe:

**Bullard GmbH**  
Lilienthalstrasse 12  
53424 Remagen • Germany  
Tel: +49-2642 999980  
Fax: +49-2642 9999829

#### Asia-Pacific:

**Bullard Asia Pacific Pte. Ltd.**  
LHK Building  
701, Sims Drive, #04-03  
Singapore 387383  
Tel: +65-6745-0556  
Fax: +65-6745-5176



©2018 Bullard. All rights reserved.